
PURILTECH

Spa Cover ROCKER

PRS-601-ROCK PRS-651-ROCK

ASSEMBLY INSTRUCTIONS

PARTS LIST		
DESCRIPTION		QTY
A.	Under-Mount Base Brackets	2
B.	Bottom Pivot Arms	2
C.	Support Crossbar Arms	2
D.	Center Extension (1 Fluted)	2
E.	Self Tapping Screws	12
F.	Plastic Pivot Caps	4
G.	Black Plastic Caps	4
H.	Hex Screws	2
1.	Flat Washer	4
J.	Nuts	2

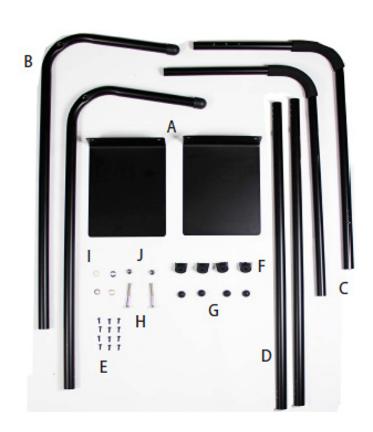

Installation Instructions

Position your spa cover in the closed position with all four corners evenly matched with the spa corners.

Connect the Pivot Arm (B) to a Plastic Pivot Cap (F) on each side of the hole (flat side out). Next, connect the Pivot Arm (B) to the Under-Mount Base Bracket (A) with a Washer (I) & Hex Screw (H). Attach Plastic Caps (G). See Figure 1. Repeat on the other side.

Slide the both *Under Mount Base Brackets* under the spa with the *Pivot Arms (B)* in the upright position. *Note: The edge of the Base Bracket should be 7" for the edge of the spa. See Figure 2.*

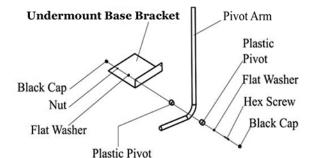


Figure 2




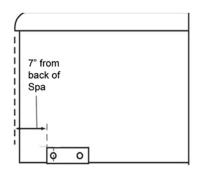



Figure 1

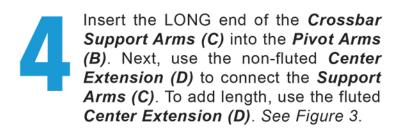

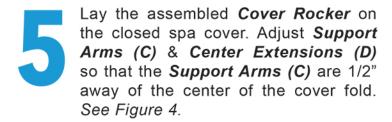

Use the Self-Tapping Screws (E) to secure the Pivot Arms (B), Support Arms (C), & Center Extensions (D) together.

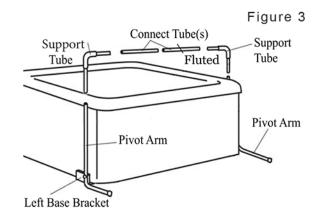

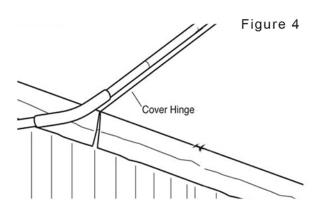

PRO TIP

When using both *Center Extensions (D)*, rotate extensions so that the Self-Tapping Screws (E) are positioned at the same angle to the Support Arms (C). Doing this action will prevent the screws heads from damaging the spa cover during operation of the Cover Rocker.

CAUTION: DO NOT USE THE COVER LIFT IN HIGH WIND CONDITIONS. DOING SO COULD CAUSE THE COVER TO FALL. DAMAGE TO THE SPA COVER/COVER LIFT, OR INJURY TO THE OCCUPANTS MAY OCCUR. NEVER LEAVE AN UNCOVERED HOT TUB OR SPA UNATTENDED.